

Assembly Instructions For Top Mount Rail Options (double, triple, & quad)





Tools Needed (not provided)

- 7/16" socket or adjustable wrench (7/16" socket is preferable)
- Phillips screw driver
- No Drilling is required (all necessary mounting holes have been pre-drilled at factory)
- All necessary hardware is provided (i.e. stainless steel nuts & bolts)


1

With the post securely mounted into the ground with concrete, place the horizontal rail onto the post. When done correctly, the (2) predrilled mounting holes will line up perfectly.

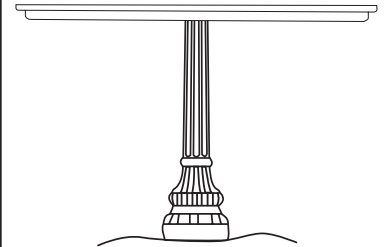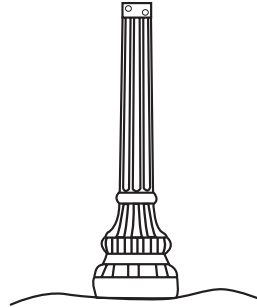



2

Attach the rail to the post using the provided (2) 3 1/4" x 1/4 -20 stainless steel bolts and (2) nylock nuts.

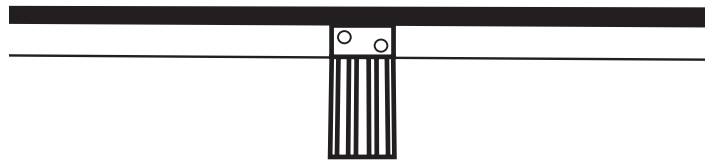

3

Attach mailboxes to the newspaper tubes using the (4) 1/2" x 1/4-20 bolts and (4) nylock nuts per box. If your mailbox style does not use newspaper tubes, skip ahead to step 4.

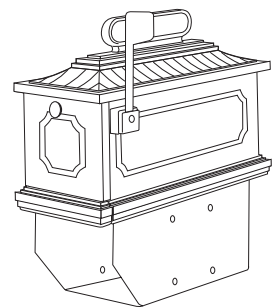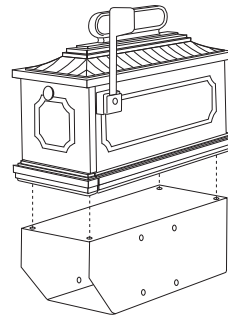

4

4-A.) Using (4) 1/2" x 1/4-20 screws, & (4) nylock nuts, attach the newspaper tubes directly to the horizontal rail. If your mailbox style does not use newspaper tubes, use the bolts to attach directly to the horizontal rail through the predrilled holes in the mailbox.

4-B.) If your mailbox style uses medium size rural mailboxes, acrylic mounting plates will be provided instead. Using the same bolts, attach mailboxes to these plates before next step.

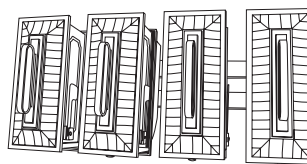


Figure 4-A

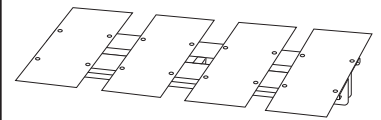


Figure 4-B

5

At this time, if optional address plates were ordered they can be installed to the rail below each mailbox or tube using the predrilled holes and (2) 3/4" x 1/4-20 bolts & (2) nylock nuts.

