

Assembly Instructions For Side Mount, Full Post Option





Tools Needed (not provided)

- 7/16" socket or adjustable wrench (7/16" socket is preferable)
- Phillips screw driver
- No Drilling is required (all necessary mounting holes have been pre-drilled at factory)
- All necessary hardware is provided (i.e. stainless steel nuts & bolts)



1

Attach mailboxes to the newspaper tubes using the (4) 1/2" x 1/4-20 bolts and (4) nylock nuts per box. If your mailbox style does not use newspaper tubes, skip ahead to the next step.

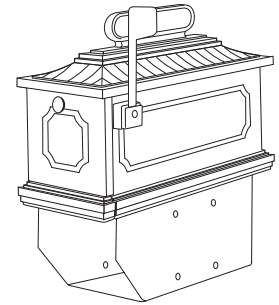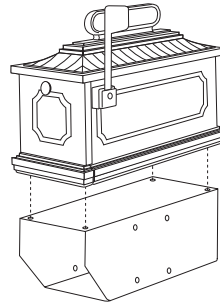



2

Fasten the 1812 brackets (X in shape) to the back of the newspaper tube utilizing the (4) 3/4" x 1/4-20 bolts & (4) nylock nuts. Use the (4) existing predrilled holes. When finished, these brackets will wrap half way around the post where they will meet with the 1812 brackets from the 2nd news paper tube.

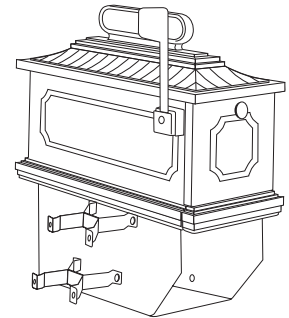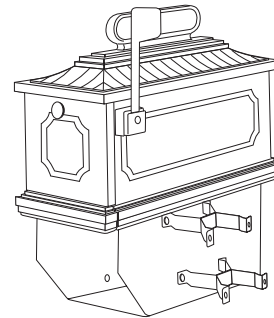

3

If your mailbox does not use newspaper tubes, the 1812 brackets (X in shape) will attach with (4) predrilled holes directly to the side of the 1812 mailbox. (The Talahassee option does not use a newspaper tube)

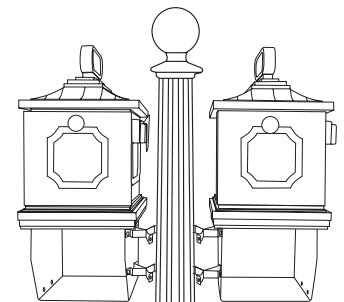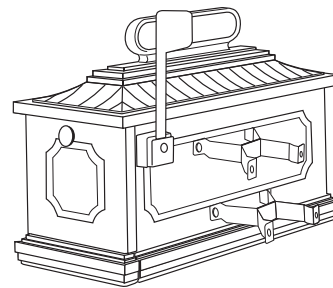

4

Bring each of the (2) complete mailbox units up to the opposite side of the post and fasten the two pairs of 1812 brackets to each other using the remaining (4) 2 1/2" x 1/4-20 bolts and (2) nylock nuts. Adjust for height, and tighten into place.

3

4

5

If your mailbox uses address plates, these can now be attached using (2) 3/4" x 1/4-20 bolts and (2) nylock nuts per address plate. At the bottom of each newspaper tube are two sets of predrilled holes allowing for an assembly that is perpendicular or parallel to the direction of the newspaper tube.

